 


*DONNER*

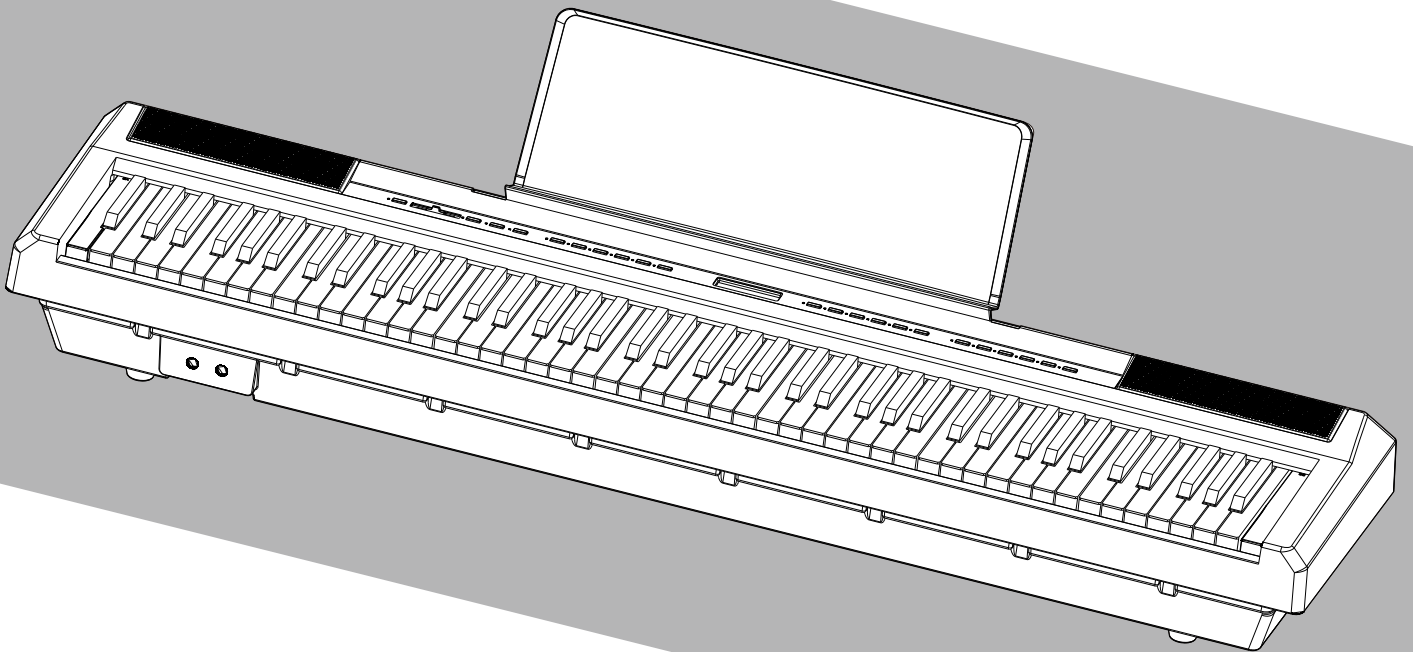

**DEP-20**

数码钢琴使用说明书

**DIGITAL PIANO**

**INSTRUCTION MANUAL**



Please read carefully the following precautions before use.  
Keep these precautions somewhere safe for future reference.

### **Warning**

▲When using, please observe the following precautions at any time. All these precautions prevent user from casualty accidents caused by electrical shock, shock circuits, accidents, fire or other dangerous events. Notices are described in the following (but not limited to):

- Keep away from rain & avoid using in the damp place.
- Do not put the water container on the piano since it may result in water flowing into the piano.
- If wire or plug is wore out, damaged or cut off suddenly during operation with unusual odors or smoke, please shut off the power immediately, pull out the plug and call maintenance personnel to check & repair.

▲Please control the supply voltage between 100V-220V, too high or too low will damage the piano.

- Please turn the power off and pull the plug before cleaning the piano.
- Do not touch any charged body with wet hands or wipe & wash the piano with corrosive volatile solvent.
- Check the condition of power switch & line regularly.
- When replacing the fuse, be sure to use only a fuse of the same rating.

 
### **Notes**

▲When using, please also observe the following precautions to avoid injury to user & other people or avoid damage to the piano or other external equipment. Notices are described in the following (but not limited to):


- Keep the AC power cord away from heat, such as heater.
- Don't over bend the power line.
- Don't put heavy stuff on the power line.
- Don't place the power line somewhere people walk through.
- Don't twine other stuff with power line to avoid damage the power cord.
- When pulling the plug, please pull the plug itself rather than wire.
- Unplug the power plug when not in use or under thunderstorms weather.
- Don't place the piano in dusty, vibration, cold or high temperature environment (Such as direct sunlight, heating or sun-exposed conveyance) to avoid damage inner or external components.

- Unplug the power line or other connection wires before moving the piano.
- Wipe the piano with dry and soft cloth for cleaning. Do not wipe it with paint, organic solvent, detergent or other corrosive cleaners to avoid color fading of the panel or piano key.
- Please turn off all the power switch before connecting the piano with other devices.
- Adjust the volume to the minimum before switching off the power. When using, set the volume to the minimum first, and increase it to confirm suitable volume.
- Keep away from other appliances, such as television, radio, sound, etc. Because they may interfere each other.
- Set the piano on flat ground to avoid toppling down.
- Don't put heavy stuff on the piano and do not type on the keys or adjust the switch heavily.
- This product has volume settings with large range to fit most occasions like classroom, studio, etc. For daily use, user should adjust the proper volume. If the volume is too loud for a long time, it will affect the musical effect and damage your listening.
- Avoid violent collision because it may damage the user and piano itself.

1. Slightly install the music stand into the groove of the piano body.

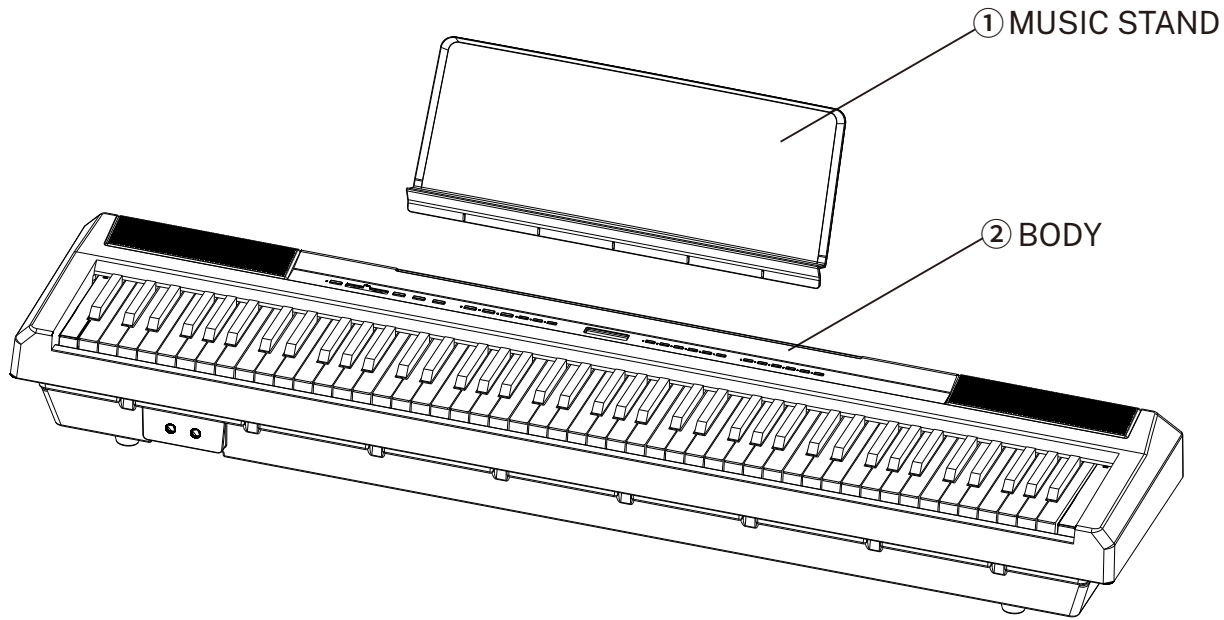


 2. Insert pedal into the pedal jacks on the back of the body.

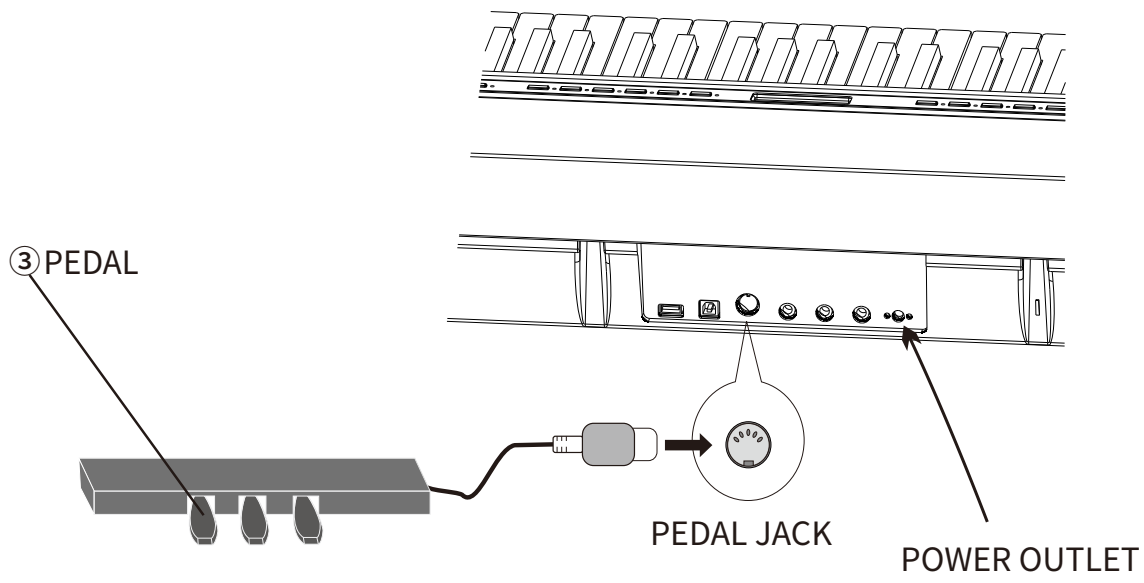

After the installation is done, plug in the power supply and start your music journey. (Power Outlet is on the back of the body.)


## 1. Piano Connection Interface Panel

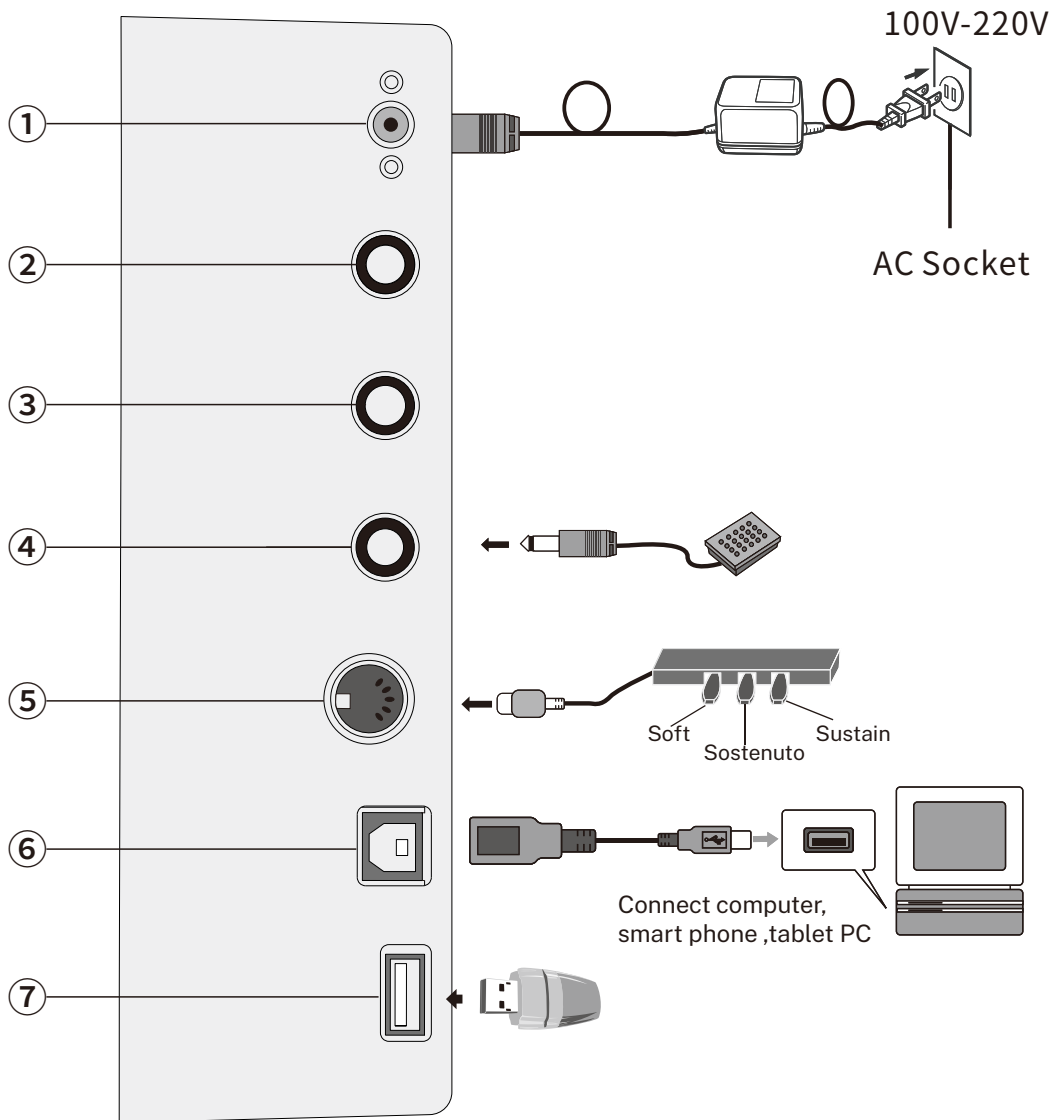 

- ① Power Line Socket
- ② Audio Output
- ③ Audio Input
- ④ Sustain Pedal Socket

- ⑤ Pedals Socket
- ⑥ USB Transmission Socket
- ⑦ MP3 Socket

## 2. Earphone Interface

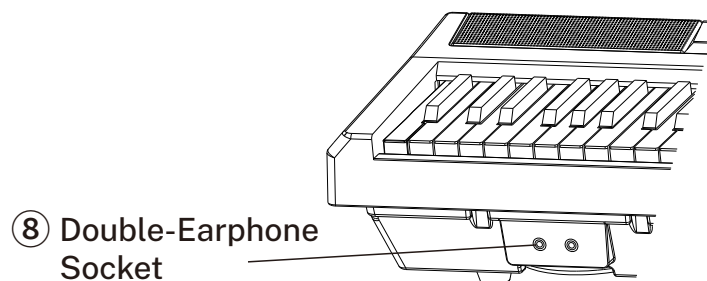 

- ⑧ Double-Earphone Socket

## 1. Power Line Socket

1. As figure shows, connect the power line when using. One end is inserted into the power outlet on the controller plate at the bottom of piano. The other end is inserted into a 100V-220V household socket.
2. Please unplug the power line and reserve it in an appropriate way when it is not used for a long time.

## 2. Audio Output

 
It supports external large speaker equipment by audio output plug.

## 3. Audio Input

External sound source can be connected to electric piano to play by audio input plug.


## 4. Sustain Pedal Socket

The product has tenuto pedal function. Please use pedal according to your needs when playing.



## 5. Pedals Socket

 Insert the pedal plug into the round jack at the back of the piano and put through the triple pedals function with speaker effect. The order is as follows: Soft, Sostenuto, Sustain; Single pedal is optional. (Third Point)

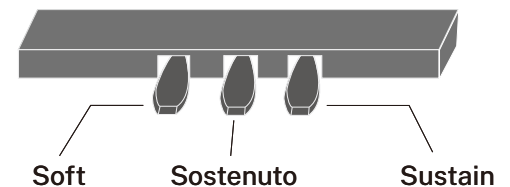

## 6. USB Transmission Socket

The product can be connected with computer by USB transfer interface. You can learn or play the keyboard to play, compose, store and operate other functions by the pre-installed music software on the computer. Edited music or accompaniments built in the music software can be played by the digital piano which is connected to the software or performed along with accompaniments.

## 7. MP3 Socket

1. Insert the flash disk with MP3 format songs into "USB plug" and play MP3 songs in 3 seconds or so.
2. By pressing the MP3 Control "▶||" button, MP3 songs can be paused or replayed.
3. Press once the control button of MP3 Control "◀◀" or "▶▶" lightly to select previous or next MP3 songs.
4. Adjust the volume of songs by long pressing the MP3 Volume "⊕" or "⊖" control button.

 
 
- The peak value of sound needs the control of main volume lever.

## Attention!

- Only support songs with MP3 format.

## 8. Double-Earphone Socket

The connection of headphones will cut off the output of the piano built-in speaker for not disturbing others when performing. This product is designed with 2 earphone sockets which you can insert double earphones.

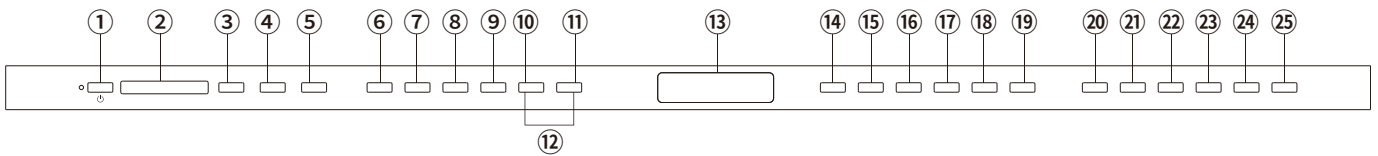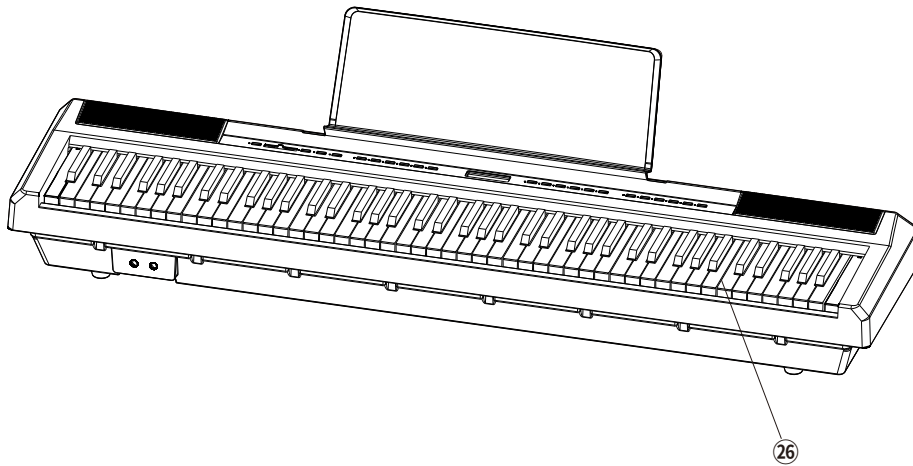

- |  |                      |
|--|----------------------|
| 1.Power Switch   | 12.Transposition     |
| 2.Total Volume   | 13.Display           |
| 3.MP3 Move Previous/VOL-   | 14.Demo              |
| 4.MP3 Pause/Play   | 15.Synthetical Chord |
| 5.MP3 Move Next/ VOL+  | 16.Dynamics          |
| 6.Grand Piano/Tone   | 17.Sound             |
| 7.Rhythm   | 18.Double Keyboard   |
| 8.Start  | 19.Tempo -           |
| 9.Sync   | 20.Tempo +           |
| 10.Tone/Dome/Rhythm/Dual<br>Tone/Metronome Setting/<br>Transposition + | 21.Dual Tone         |
| 11.Tone/Dome/Rhythm/Dual<br>Tone/Metronome Setting/<br>Transposition - | 22.Keyboard Drum     |
|  | 23.Metronome         |
|  | 24.Record            |
|  | 25.Play Sound        |
|  | 26.Keys              |




This chapter will introduce functional jacks of the piano & related contents before performance to you. Before turning the power switch on, be sure to read the following contents.

## Turn On the Power

 1. Check if the power switch of the piano is turning off first. If not, please turn off the power.
2. Connect the power, insert the plug into the power jack behind the piano first, and then plug the opposite end of power adapter into the power socket.
3. Before turning on the power, adjust the volume controller to the minimum first.
4. Before turning off the power of digital piano, adjust the volume controller to the minimum first, and then turn off the power.

### NOTE

When not using the piano or thunder  
Please unplug the power plug.

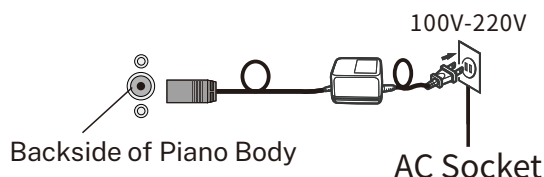

## Master Volume

Adjust the main fader of control panel.

1. Swipe the fader right means increase the volume.
2. Swipe the fader left means decrease the volume.

## Tone Setting

1. This digital piano has 238 types of tone.(See annex I)
2. The default tone is grand piano(000). Press the tone button to display +/- button and change the tone by adjustment.
3. Double click to play back the default tone.

## Demo Playing

Press the Model Music Collection button to start playing the demo.  
Select the pieces by clicking +/- button .  
Re-press the Demo button to stop playing(See annex II).

## Velocity Curve

1. Three kinds of velocity curves can be set: Light, Standard, Heavy(t00-t02) & Velocity switch.  
The default velocity is t01.
2. Press Velocity button repeatedly to the setting and choose the corresponding curve: t00-t02, tof.

## Rhythm Selection

There are 200 kinds of rhythms: 000-200. (See rhythm sheet of annex III)  
The default rhythm is No.000.

Press the button and entry mode choice to select the proper rhythm by +/- button.  
Press the Start/Stop button to start playing the rhythm.

## Accompaniment Speed Adjustment

1. Adjust the speed of accompaniment by Tempo +/- button.  
Adjustable range from 20 to 280 beats per minute .
2. Choose the accompaniment when it stops, and the speed automatically turns to the preset.  
Switch the accompaniment when it is playing, the speed does not return the preset.
3. Press the Tempo + & - button at once to return the default.

## Accompaniment Starting Mode

The accompaniment of this digital piano has two opening modes:

- ◆ Auto Start:  
Press the Sync button to enter prepare state. When performing, the accompaniment will start up automatically.  
Press the Start/Stop button to stop the accompaniment.
- ◆ Manual Start:  
Press Start/Stop button, the accompaniment will start immediately, repress the button, it will stop immediately.

## Automatic Chord

- There are two chord modes of this digital piano: Single Finger Chord & Multi Finger Chord.
- Press Comprehensive Chord button means enable automatic chord function that will identify automatically single finger & multi finger and play corresponding chord when playing the keys of the left half. Repress the button to turn off this function.

## Metronome

1. Press Metronome button to enable this function, the default speed is that of first rhythm.
2. Adjust the speed range of metronome from 20-280 beats per minute by Tempo +/- button.
3. Repress the Metronome button to exit this function and the current speed is saved.

**Note: Restart the piano will restore the default speed.**

## Metronome Setting

Long press to enter the mode of metronome type selection.

Choose corresponding metronome type by +/- button:(1-4, 2-4, 3-4, 4-4, 3-8, 6-8).

When finish the selection, the chosen type will be confirmed by pressing the Metronome button or after two seconds of user inactivity.

## Transposition Setting

- Press +&- button simultaneously to enter the mode of transposition selection and choose by +/- button.
- The transposition type has 12 positive & 12 negative levels.
- Press the Tone button or Rhythm button or wait for two seconds to exit this mode.

## Double Tone Setting

Enable this function by On/Off button.

Choose the first tone by +/- button, and then press Double Tone button to enter selection mode and choose second tone by +/- button.

## Double Keyboard Setting

Enable this function by On/Off button.

When press this function key, the A1-B4 musical scale will play A2-B5 scale accordingly while C5-C9 scale will play C4-C8 scale.

Choose the main tone by +/- button to replace the original tone of C5-C9 key.

## Keyboard Drum Setting

Enable this function by On/Off button.

Press this button to get the drums on the keys.

## Record Setting

- Press Record button to enter record mode and play the Metronome sound.
- Press the Metronome button to switch off the sound.
- Press any key to start recording.
- Repress the Record button to stop recording.

## Playback Setting

When the sound track is recorded, press the Playback button to play the recorded sound track.

## Effect Setting

Enable this function by On/Off button.

Press this button to open DSP effect.

## MP3 Setting

Press MP3 Player button to play or pause the MP3 music.

Short press MP3 Previous Song button to play previous track.

Long press MP3 Previous Song button to turn down the volume.

Short press MP3 Next Song button to play next song.

Long press MP3 Next Song button to turn up the volume.

Issue	Reason	Solution
There was no sound on the keyboard.	1.Volume Controller Set at Minimum Position. 2.Headphones or Plug Converters insert headphone jack. 3.The power supply is not connected or the piano is off.	1.Turn the volume to the right maximum volume. 2.Remove the original connector form the headphone jack. 3.Turn on the power supply and press the boot button.
The pedals don't work.	1.Connecting line jack of pedal is not plugged into piano. 2.Pedal plug loose.	1.Plug the pedal cord into the piano jack. 2.Check to confirm whether the plug at one end of the pedal connection is loose or not, and then tighten it.
When the piano power is turned on or off there is a murmur.	Normal phenomenon	This is a normal phenomenon, indicating that the current enters the machine at this time.
The piano is noisy when using a mobile phone.	Radio interference	The use of mobile phones in the vicinity of the piano produces radiation. To avoid this situation, you can turn off the mobile phone or use it away from the piano.
Abnormal tone or rhythm.	Power shortage	Power shortage. Check power stability.
It seems that all tones are pronounced or that the pronunciation seems to be cut off.	Normal phenomenon	The maximum number of simultaneous sounds on this instrument is 128 notes. If the dual tone mode is in use and the accompaniment or music is playing, some notes or sounds in the accompaniment or music will be default.
Under the same timbre, the quality of a note is different from that of a note.	Normal phenomenon	This is a normal phenomenon. This machine adopts AWM sound source mode. This kind of sound source is sampled and recorded in the whole keyboard area, so the quality of the two notes is slightly different.

# After Sale Service

## Warranty:

Dear User:

This qualified product passed quality verification under strict quality management.

Thank you very much for using our digital piano. In order to satisfy you with our services, please read carefully after purchase and fill out this 3-guarantee card and properly keep.

- ◆ During warranty period, we are responsible for giving free maintain if the product breaks down under normal usage circumstance. The warranty period of our product is referred to the period of state regulation.
- ◆ This card is considered as the proof of warranty.
- ◆ The work of guaranteed repair will be responsible and arranged by the seller. Please show this card and related proof when contacting.

### **Free maintain won't be given under the following circumstance:**

1. The period of 3-guarantee has expired.
2. The breakdown caused by the manipulation that hasn't follow the requests of the user manual.
3. The damage caused by the dismantle movement of a non-our-company authorized maintainer .
4. No certificate & effective invoice three bags, but can prove that the digital piano in the three bags of goods, except for the life of.
5. Three Guarantees unauthorized alteration.
6. The damage caused by the Force Majeure.

**The fare of paid service is confined to material,  
labor & shipping fees.**

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

Date of Maintenance	Date of Inspection
Failure Causes	
Maintenance Records	
Maintenance Company	Signature of Maintenance personnel

CATEGORY	MIDI PG#	NAME
Piano	1	Acoustic Grand Piano
	2	Bright Acoustic Piano
	3	Electric Grand Piano
	4	Honky-tonk Piano
	5	Electric Piano 1
	6	Electric Piano 2
	7	Harpsichord
	8	Clavichord
Percussion instruments	9	Celesta
	10	Glockenspiel
	11	Music Box
	12	Vibraphone
	13	Marimba
	14	Xylophone
	15	Tubular Bells
	16	Dulcimer
Organ	17	Hammond Organ
	18	Percussive Organ
	19	Rock Organ
	20	Church Organ
	21	Reed Organ
	22	Accordion
	23	Harmonica
	24	Tango Accordion
Guitar	25	Acoustic Guitar

Guitar	26	Acoustic Guitar (steel)
	27	Electric Guitar (jazz)
	28	Electric Guitar (clean)
	29	Electric Guitar (muted)
	30	Overdriven Guitar
	31	Distortion Guitar
	32	Guitar Harmonics
Bass	33	Acoustic Bass
	34	Electric Bass (finger)
	35	Electric Bass (pick)
	36	Fretless Bass
	37	Slap Bass 1
	38	Slap Bass 2
	39	Synth Bass 1
	40	Synth Bass 2
Strings	41	Violin
	42	Viola
	43	Cello
	44	Contrabass
	45	Tremolo Strings
	46	Pizzicato Strings
	47	Orchestral Harp
	48	Timpani
	49	Strings Ensemble 1
	50	Strings Ensemble 2
Ensemble	51	Synth Strings 1
	52	Synth Strings 2
	53	Choir Aahs



Ensemble	54	Voice Oohs
	55	Synth Voice
	56	Orchestra Hit
Brass	57	Trumpet
	58	Trombone
	59	Tuba
	60	Muted Trumpet
	61	French Horn
	62	Brass Section
	63	Synth Brass 1
	64	Synth Brass 2
Reed	65	Soprano Sax
	66	Alto Sax
	67	Tenor Sax
	68	Baritone Sax
	69	Oboe
	70	English Horn
	71	Bassoon
	72	Clarinet
Blowpipe	73	Piccolo
	74	Flute
	75	Recorder
	76	Pan Flute
	77	Bottle Blow
	78	Shakuhachi
	79	Whistle
	80	Ocarina

Lead	81	Lead 1 (square)
	82	Lead 2 (sawtooth)
	83	Lead 3 (calliope lead)
	84	Lead 4 (chiff lead)
	85	Lead 5 (charang)
	86	Lead 6 (voice)
	87	Lead 7 (fifths)
	88	Lead 8 (bass+lead)
Pad	89	Pad 1 (new age)
	90	Pad 2 (warm)
	91	Pad 3 (polysynth)
	92	Pad 4 (choir)
	93	Pad 5 (bowed)
	94	Pad 6 (metallic)
	95	Pad 7 (halo)
	96	Pad 8 (sweep)
FX	97	FX 1 (rain)
	98	FX 2 (soundtrack)
	99	FX 3 (crystal)
	100	FX 4 (atmosphere)
	101	FX 5 (brightness)
	102	FX 6 (goblins)
	103	FX 7 (echoes)
	104	FX 8 (sci-fi)
Percussion	105	Sitar
	106	Banjo
	107	Shamisen
	108	Koto
	109	Kalimba

Percussion	110	Bagpipe
	111	Fiddle
	112	Shanai
	113	Tinkle Bell
	114	Agogo
	115	Steel Drums
	116	Woodblock
	117	Taiko Drum
	118	Melodic Tom
	119	Synth Drum
	120	Reverse Cymbal
	Sound Effect	121
122		Breath Noise
123		Seashore
124		Bird Tweet
125		Telephone Ring
126		Helicopter
127		Applause
128		Gunshot
Piano 2	129	Piano w
	130	Piano d
	131	Honky Tonk W
	132	Detuned EP
	133	60s E.Piano
	134	Harpsichord 2
	135	Clavichord 2
Organ 2	136	Celesta 2
	137	Glockenspiel 2
	138	Music Box 2

Organ 2	139	Vibraphone 2
	140	Marimba 2
	141	Marimba 2
	142	Xylophone 2
	143	Tubular-bell 2
	144	Detuned Organ
	145	60's Organ
	146	Bandoneon
Guitar	147	Ukulele
	148	Mandolin
	149	Hawaiian Gt
	150	Chorus Gt
	151	Funk Gt
	152	Feedback Gt
Synth	153	Synth 1
	154	Synth 2
	155	Synth 3
	156	Synth 4
	157	Synth 5
	158	Synth 6
	159	Synth 7
Strings 2	160	Violin 2
	161	Cello 2
	162	Harp 2
	163	Strings
Ensemble 2	164	Choir Aahs 2
	165	Voice doo 2
Brass 2	166	Trumpet 2
	167	Trombone 2

Brass 2	168	Mute Trumpet 2
	169	French Horn 2
	170	Brass 2
Reed 2	171	Soprano Sax 2
	172	Oboe 2
	173	English Horn
	174	Clarinet 2
Blowpipe 2	175	Piccolo 2
	176	Flute 2
	177	Pan Flute 2
	178	Shakuhachi 2
Lead 2	179	Square 2
	180	Sine Wave
	181	Vox Lead
FX 2	182	Space Voice
	183	Syn Mallet
	184	Echo Bell
	185	Echo Pan
Ethnic 2	186	Sitar 2
Percussion 2	187	Castanets
	188	Concert BD
	189	808 Tom
	190	Electric Percussion
Sound Effect 2	191	Gt.CutNoise
	192	String Slap
	193	Fl.KeyClick
	194	Thunder
	195	Wind
	196	Stream

Sound Effect 2	197	Bubble
	198	Dog
	199	Creaking
	200	Door
	201	Burst Noise
	202	Laughing
	203	Screaming
	204	Heart Beat
	205	Footsteps
	206	Explosion
Ethnic Percussion Instrument	207	Luo
	208	Pai Gu
	209	Qin
	210	Bian Zhong
	211	Yang Qin
Ethnic Stringed Instrument	212	Liu Qin
	213	Pi Pa
	214	Zhong Ruan
	215	Da Ruan
	216	Yue Qin
	217	San Xian
	218	Gu Zheng
	219	Gu Qin
Ethnic Wind Instrument	220	Shen
	221	Na Zi
	222	Bi Li
	223	Guan Zi
	224	Ba Wu

Ethnic Wind Instrument	225	Di Zi
	226	Hu Lu Si
	227	Pai Xiao
	228	South Xiao
	229	Xiao
	230	Kou Di
	231	Xun
National Bow Stringed Instrument	232	Gao Hu
	233	Er Hu
	234	Zhong Hu
	235	Ma Tou Qin
	236	Ban Hu
	237	Jing Hu
	238	Hu Ensemble

NO.	NAME
1	FUNK
2	RIVER_OF_DREAM
3	DANCING QUEEN
4	DONNA_LEE
5	FORGET
6	CHOPIN:GRANDE VALSE BRILLANTE
7	ACROSS THE SEA
8	XAVER SCHARW ENKA:POLISH DANCE Op.3 No.1
9	RED CHERRY AND WHITE APPLE BLOSSOM
10	COUNTRY_GARDEN
11	COURANTE
12	JUST DRUNK
13	CARRY ME BACK TO OLD VIGINNY
14	EARLY_AUTUMN
15	TWIST VARIATION
16	DANSE NEGRE Op.58
17	PALM LEAF
18	D MAJOR TANGO
19	SYMPHONY NO.94 SURPRISE
20	KATYUSHA
21	DESAFINADO
22	BEETHOVEN_BAGATELLES
23	IN THE HALL OF THE MOUNTAIN KING
24	EXPLORING
25	PERELUDE III
26	GRAND MARCH
27	PARAPHRASE
28	DANGEROUS AREA
29	FUTURE
30	SUNSHINE BEACH



31	JUNE SAMBA
32	KENNYG:SONG BIRD
33	L'INVERNO IN F MINOR
34	WINE
35	BLUES
36	FEELING
37	TURKEY
38	ETUDE IN F SHARP MAJOR
39	FUNNY GENTLEMAN
40	I DO IT FOR YOU
41	BEETHOVEN PIANO SONTA No.30
42	CARMEN
43	AMERICAN PATROL
44	MENDELSSOHN:RONDO IN D MAJOR
45	AURORA OF CITY
46	WISH U CHRISTMAS
47	NO STOPPING GALOP
48	LAST SUMMER
49	JAZZ
50	RHYTHM OF THE RAIN
51	TWINKLE TWINKLE VARIATION
52	ATLANTIS
53	FLYING TRAPEZE
54	TROIS ECOSSAISES Op.72,No.3-5
55	ALLEGRO CON BRIO
56	LEMON TREE
57	ARABESQUE
58	CHILDHOOD
59	JUST THE TWO OF US
60	SEE SHORE
61	ALL KIND OF MY EVERY THING
62	NOCTURNE Op.9 No2

63	SOMETHING IN THE AIR
64	COMFORT
65	LET IT SNOW
66	BINGO
67	LIEBESTRAUM
68	PERFECT HAPPINESS
69	TOCCATA
70	LA BAMBA
71	RANDO CAPRICCIO
72	SCHERZO
73	LA CAMPANELLA
74	LOCK OUT
75	ROMANCE DE AMOR
76	BARCAROLE
77	CHOPIN:ETUDE IN CMINOR Op.10 No.12
78	DANCE OF YOUTH
79	GRIEG_AIR
80	THE HOME COMING
81	LAZY_BIRD
82	RED RIVER VALLEY
83	ENTERTAINMENT
84	CHOPIN:MAZURKA Op.39 No.10
85	THE BEAR IN THE FOREST
86	PRIMITIVE DANCE STEPS
87	MODERN GRAY
88	MOONLIGHT
89	LOVE FOR EVER
90	JARDIN SECRET
91	BALL
92	COUNTRY

93	SOMALI LAND
94	MAPLE LEAF RAG
95	BRAHMS_CONCERTO
96	WALTZ IN D FLAT, OP.64 NO.1
97	COBWEB
98	HAPPY BOSSA
99	SILENT NIGHT
100	CURIOUS STORY

CATEGORY	NO.	NAME
BLUES	1	6/8 BLUES
	2	4/4 BLUES
	3	5/4 BEAT 1
	4	5/4 BEAT 2
	5	BOOGIE WOOGIE
	6	SOULSHUFFLE
	7	RAGTIME 1
	8	RAGTIME 2
	9	SHUFFLE 1
	10	SHUFFLE 2
	11	SHUFFLE 3
	12	SHUFFLE 4
	13	BLUES 1
	14	BLUES 2
	15	BLUES 3
	16	BLUES 4
	17	TWIST 1
	18	TWIST 2
	19	TWIST 3
	20	TWIST 4
	21	GOSPEL 1
	22	GOSPEL 2
	23	GOSPEL 3
	24	R&B
	25	SWING 1
	26	SWING 2
	27	BLUE BOOGIE
JAZZ	28	JAZZ 1
	29	JAZZ 2
	30	JAZZ 3

JAZZ	31	JAZZ 4
	32	JAZZ 5
	33	JAZZ BALLAD
	34	JAZZ WALTZ
	35	JAZZ BAND 1
	36	JAZZ BAND 2
	37	JAZZ BAND 3
	38	SWING JAZZ
	39	COOL JAZZ
	40	DIXIELAND 1
	41	DIXIELAND 2
	42	FUSION
	43	LANGE
	44	SOUL 1
	45	SOUL 2
	46	SOUL 3
FOX TROT	47	FOX TROT 1
	48	FOX TROT 2
	49	FOX TROT 3
	50	FOX TROT 4
	51	FOX TROT 5
	52	FOX TROT 6
	53	FOX TROT 7
	54	FOX TROT 8
	55	FOX TROT 9
COUNTRY	56	COUNTRY 1
	57	COUNTRY 2
	58	COUNTRY 3
	59	COUNTRY 4
	60	COUNTRY 5
	61	COUNTRY 6

COUNTRY	62	COUNTRY 7
	63	COUNTRY 8
	64	COUNTRY 9
	65	COUNTRY 10
	66	COUNTRY 11
	67	COUNTRY 12
	68	COUNTRY 13
	69	COUNTRY 14
	70	COUNTRY 15
	71	COUNTRY 16
	72	COUNTRY POP
	73	COUNTRY SHUFFLE 1
	74	COUNTRY SHUFFLE 2
	75	COUNTRY SWING
LATIN	76	LATIN 1
	77	LATIN 2
	78	LATIN 3
	79	LATIN 4
	80	LATIN 5
	81	LATIN 6
TANGO	82	TANGO 1
	83	TANGO 2
RUMBA	84	RUMBA 1
	85	RUMBA 2
	86	RUMBA 3
CHACHA	87	CHACHA 1
	88	CHACHA 2
	89	CHACHA 3
	90	CHACHA 4
	91	CHACHA 5
	92	CHACHA 6

BOSSANOVA	93	BOSSANOVA 1
	94	BOSSANOVA 2
	95	BOSSANOVA 3
SAMBA	96	SAMBA 1
	97	SAMBA 2
	98	SAMBA 3
MAMBO	99	MAMBO 1
	100	MAMBO 2
	101	MAMBO 3
REGGAE	102	REGGAE 1
	103	REGGAE 2
SALSA	104	SALSA 1
	105	SALSA 2
MODERN	106	MODERN 1
	107	MODERN 2
DANCE	108	DANCE 1
	109	DANCE 2
	110	DANCE 3
	111	DANCE 4
	112	DANCE 5
	113	DANCE 6
	114	DANCE 7
	115	70s DISCO 1
	116	70s DISCO2
	117	DISCO 1
	118	DISCO 2
	119	DISCO 3
	120	VAPERWAVE
FUNK	121	FUNK 1
	122	FUNK 2
	123	FUNK 3
	124	FUNK 4

FUNK	125	FUNK 5
	126	FUNK 6
	127	FUNK 7
R&B	128	R&B 1
	129	R&B 2
	130	R&B 3
	131	R&B 4
	132	R&B 5
	133	R&B 6
POP	134	16 BEAT 1
	135	16 BEAT 2
	136	16 BEAT 3
	137	16 BEAT 4
	138	16 BEAT 5
	139	16 BEAT 6
	140	16 BEAT 7
	141	16 BEAT 8
	142	POP 1
	143	POP 2
	144	POP 3
	145	POP 4
	146	POP 5
	147	POP 6
	148	POP 7
	149	POP 8
	150	VINTAGE 1
	151	VINTAGE 2
	152	FOLK POP
	153	NEWAGE
154	POP BOSSA 1	
155	POP BOSSA 2	
156	POP RAP	
157	POP SAMBA	



ROCK	158	8 BEAT 1
	159	8 BEAT 2
	160	8 BEAT 3
	161	8 BEAT 4
	162	8 BEAT 5
	163	8 BEAT 6
	164	8 BEAT 7
	165	8 BEAT 8
	166	8 BEAT 9
	167	8 BEAT ROCK 1
	168	8 BEAT ROCK 2
	169	ROCK 1
	170	ROCK 2
	171	ROCK 3
	172	ROCK 4
	173	ROCK 5
	174	INDIE ROCK 1
	175	INDIE ROCK 2
	176	60th Rock
	177	Glam Metal 1
	178	Glam Metal 2
	179	Glam Metal 3
	180	Punk Rock 1
	181	Punk Rock 2
	182	Punk Rock 3
	183	Punk Rock 4
	184	Punk Rock 5
	185	JIVE ROCK
186	ROCK SHUFFLE	
187	ROCK'N'ROLL 1	
188	ROCK'N'ROLL 2	

ORIENTAL	189	BEGUINE 1
	190	BEGUINE 2
	191	CARIBBEAN
	192	BOLERO
	193	DANGDUT
	194	CHINA
	195	JIANGNAN
	196	XIZANG
	197	YUNNAN
	198	HAWAII
	199	GUARACHA
	200	CHARLESTON





Donner Technology Co., Ltd.  
[www.donnerdeal.com](http://www.donnerdeal.com)  
[www.idonner.com](http://www.idonner.com)



品 牌: *Donner* 唐农  
生产商: 广州蓝深科技有限公司  
网 址: [www.donner.com.cn](http://www.donner.com.cn)